


THE ASSEMBLY DRAWINGS YOU HAVE RECEIVED ARE IN A GENERIC FORMAT. OPTIONAL ACCESSORIES MAY NOT BE SHOWN AS PROVIDED. PLEASE REFER TO YOUR PURCHASE ORDER FOR A COMPLETE DESCRIPTION OF YOUR BOOTH ORDER.

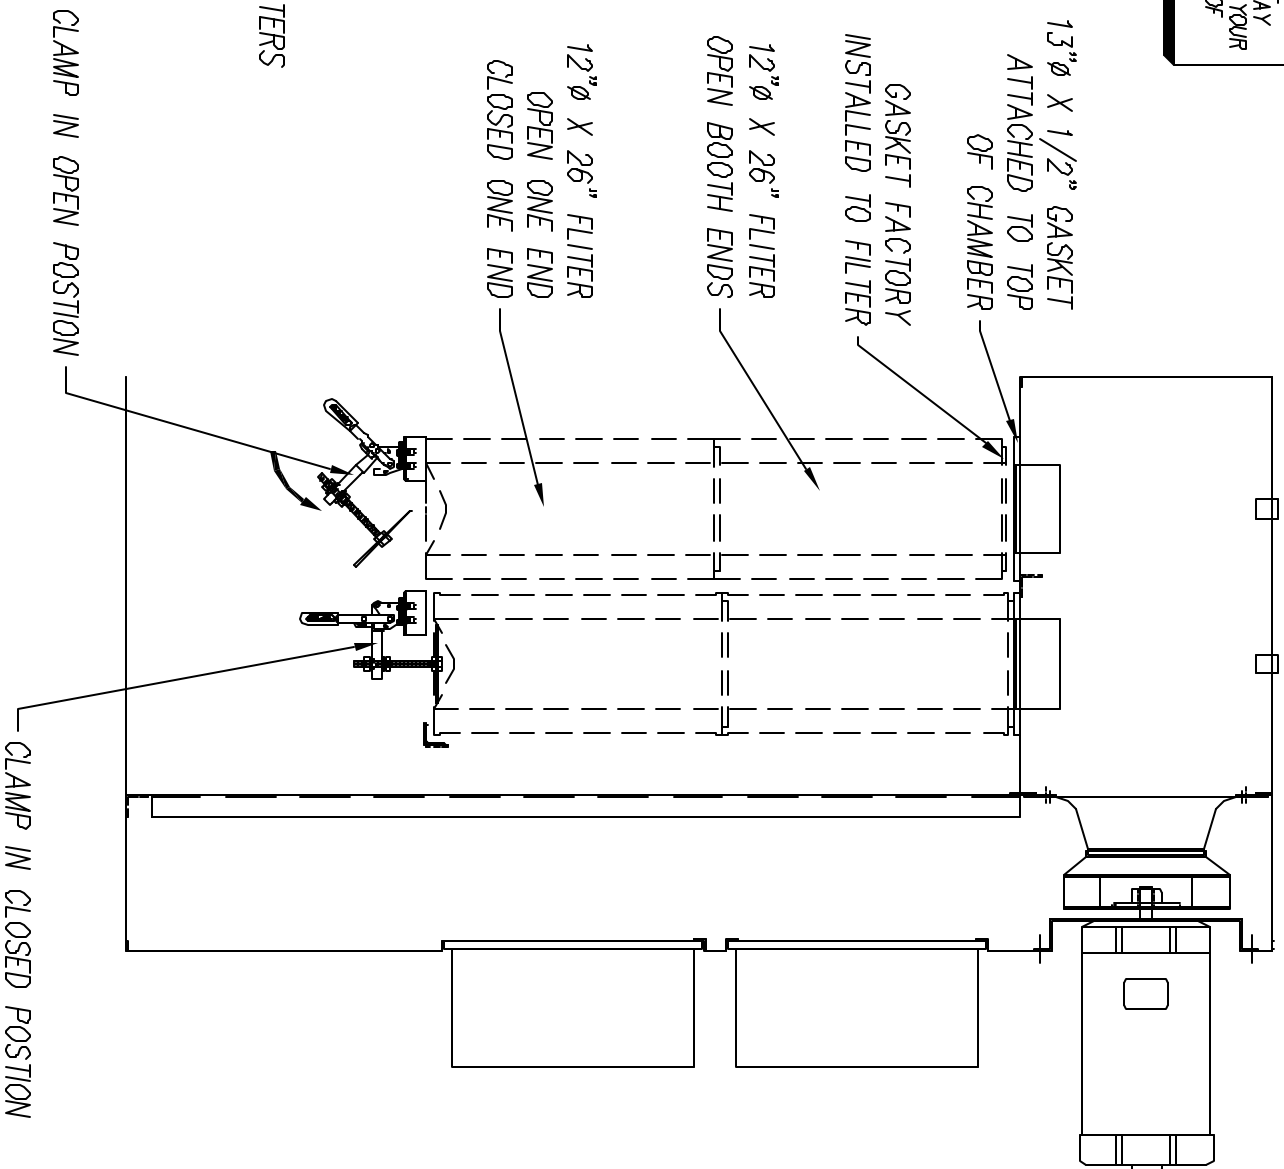

NOTE: BE SURE ALL FILTERS ARE GROUNDED.

FILTER INSTALLATION

COLMET	
Spray Booths	
REV. 01	RPB CARTRIDGE FILTER INSTALLATION
DATE 12/22/04	INSTALLATION DETAIL SHEET 43
DESIGNER NTS	